



406 (8B)	2.2	116	07/00 05/04
406 (8B)	2.2 HDi	98	03/00 05/04
406 (8B)	3.0 24V	140	10/96 05/04
406 (8B)	3.0 V6	152	03/00 05/04
406 Break (8E/F)	1.8	74	10/96 03/99
406 Break (8E/F)	1.8	66	05/97 10/04
406 Break (8E/F)	1.8 16V	85	10/00 10/04
406 Break (8E/F)	1.8 16V	81	10/96 10/00
406 Break (8E/F)	1.9 D	55	10/96 10/04
406 Break (8E/F)	1.9 TD	66	10/96 10/04
406 Break (8E/F)	2.0 16V	99	01/99 10/00
406 Break (8E/F)	2.0 16V	100	10/00 10/04
406 Break (8E/F)	2.0 16V	97	10/96 10/04
406 Break (8E/F)	2.0 16V HPi	103	05/01 10/04
406 Break (8E/F)	2.0 HDi 110	80	02/99 04/04
406 Break (8E/F)	2.0 HDi 110	79	08/01 10/04
406 Break (8E/F)	2.0 HDi 90	66	02/99 10/04
406 Break (8E/F)	2.0 Turbo	108	10/96 10/04
406 Break (8E/F)	2.1 TD 12V	80	10/96 10/04
406 Break (8E/F)	2.2	116	07/00 10/04
406 Break (8E/F)	2.2 HDi	98	03/00 10/04
406 Break (8E/F)	3.0 24V	140	10/96 10/04
406 Break (8E/F)	3.0 V6	152	03/00 10/04
406 Coupe (8C)	2.0 16V	99	01/99 10/00
406 Coupe (8C)	2.0 16V	97	03/97 12/04
406 Coupe (8C)	2.0 16V	100	10/00 12/04
406 Coupe (8C)	2.2	116	03/02 12/04
406 Coupe (8C)	2.2 HDi	98	03/00 12/04
406 Coupe (8C)	3.0 V6	152	03/00 12/04
406 Coupe (8C)	3.0 V6 24V	140	03/97 12/04

## Coduri OE

