




BENDIX FIXED TYPE Mounting

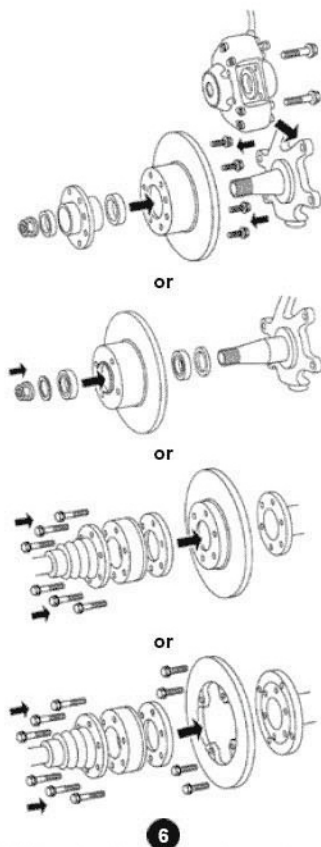


Fit the disc first, then the caliper.

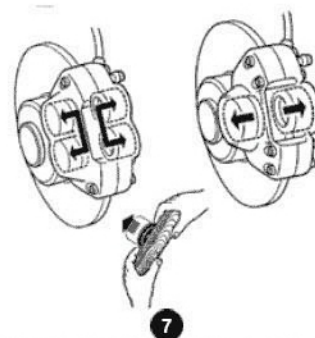


Push the pistons back (calipers with 2 or 4 small pistons).

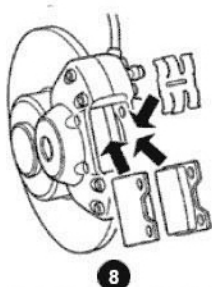


Introduce the new pads and the support spring. Different springs and pad pins fit different models.

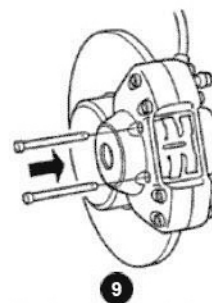

Replace the pad pins.

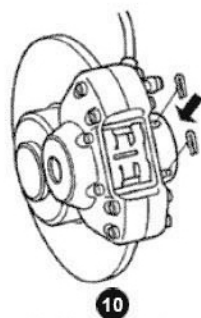


Replace the clips.

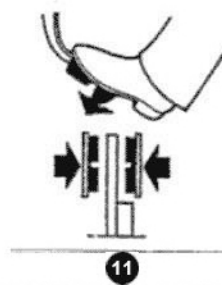


Depress the brake pedal several times to bring the pads together.

BENDIX FIXED TYPE Dismounting

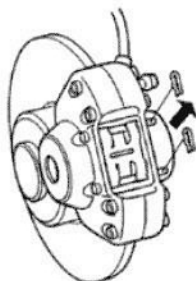


1

Remove the clips.

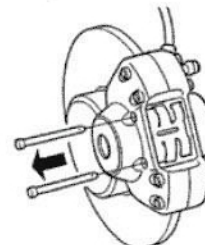


2

Extract the two pad pins.

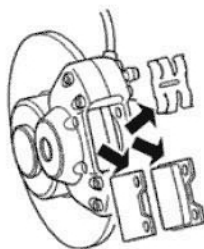


3


Remove the support spring and the pads.

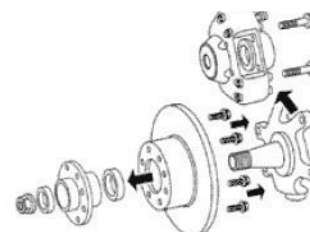


or

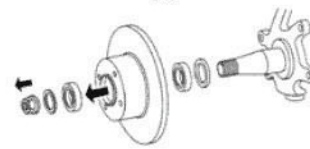

or

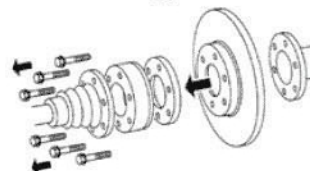


or

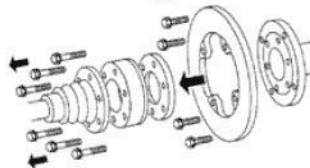

4

Remove the caliper first, then the disc.

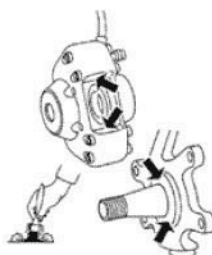

5

Dry clean the caliper and the wheel hub.