




CITROEN FIXED TYPE Mounting

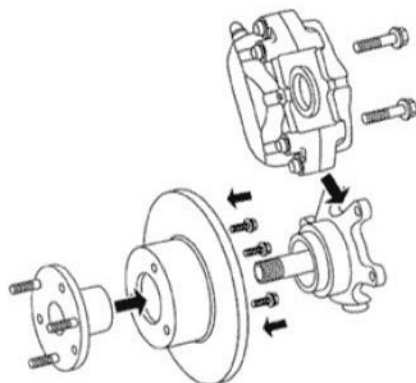

or

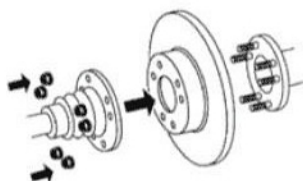


or

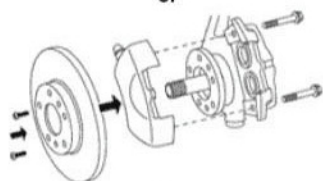


6

Fit the disc first, then the caliper.

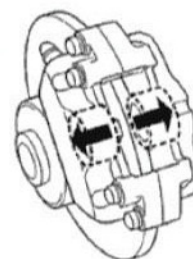


7

Push the piston back.

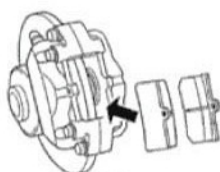


8

Introduce the new pads.

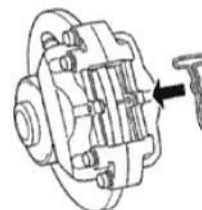


9

Position the pad support spring in the appropriate assembly direction.

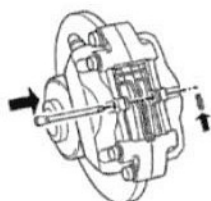

10


Reassemble the pad pin and respective clip.

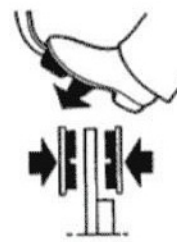

11


Depress the brake pedal several times to bring the pads together.

CITROEN FIXED TYPE Dismounting

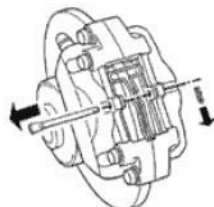


1

Remove the clip and respective pad pin. Disconnect the wear sensor, if necessary.

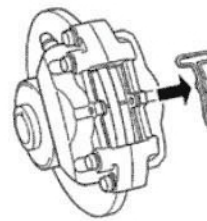




2

Remove the support spring.

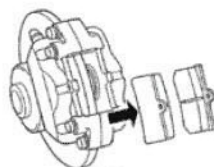


3

Remove the pads.

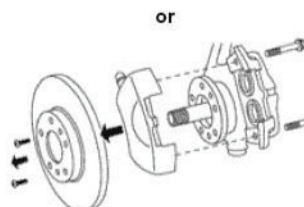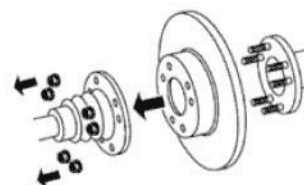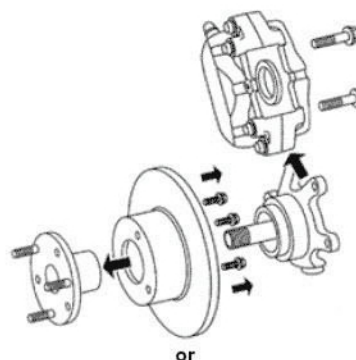

4

Remove the caliper first, then the disc.

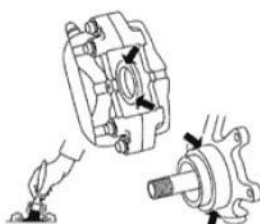

5

Dry clean the caliper and the wheel hub.