




LUCAS GIRLING FIXED TYPE Mounting

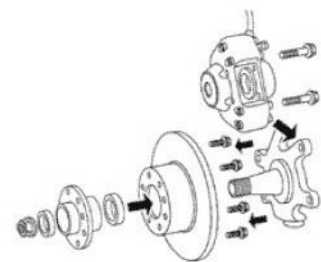


or

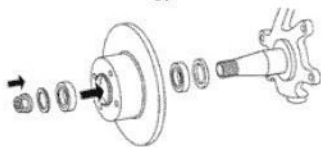

or

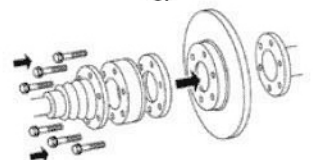


or

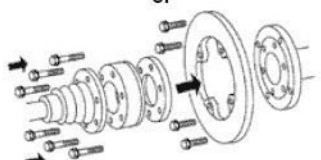


6

Fit the disc first, then the caliper.

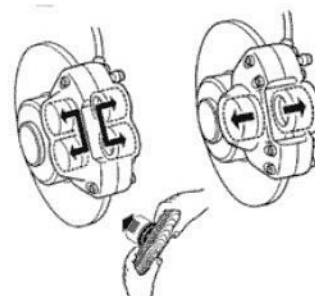


7

Push the pistons back (calipers with 2 or 4 small pistons).

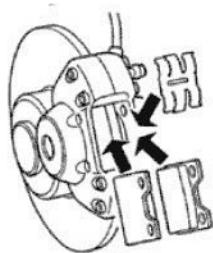


8

Introduce the new pads and the support spring. Different springs and pad pins fit different models.

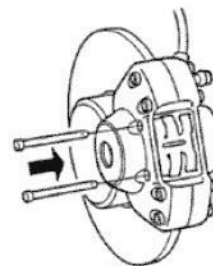


9

Replace the pad pins.

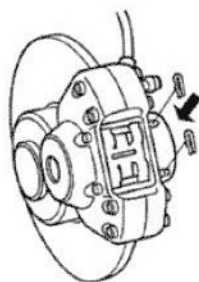

10


Replace the clips.

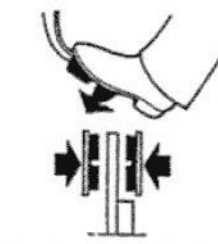

11


Depress the brake pedal several times to bring the pads together.

LUCAS GIRLING FIXED TYPE Dismounting

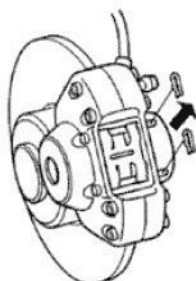


1

Remove the clips.

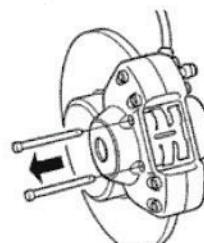


2

Extract the two pad pins.

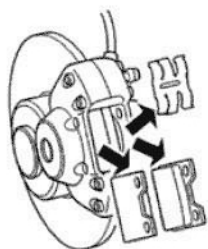


3


Remove the support spring and the pads.

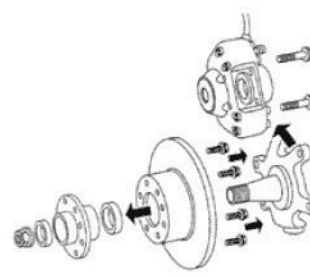


or

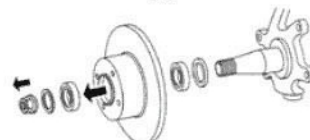

or

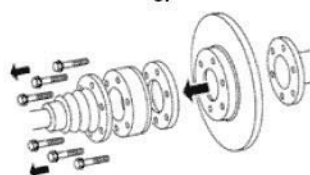


or

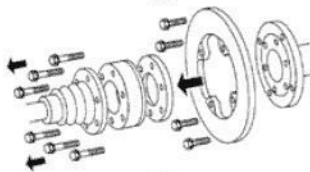

4

Remove the caliper first, then the disc.

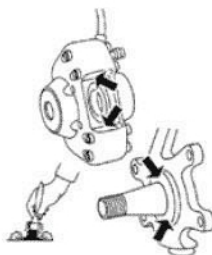

5

Dry clean the caliper and the wheel hub.